
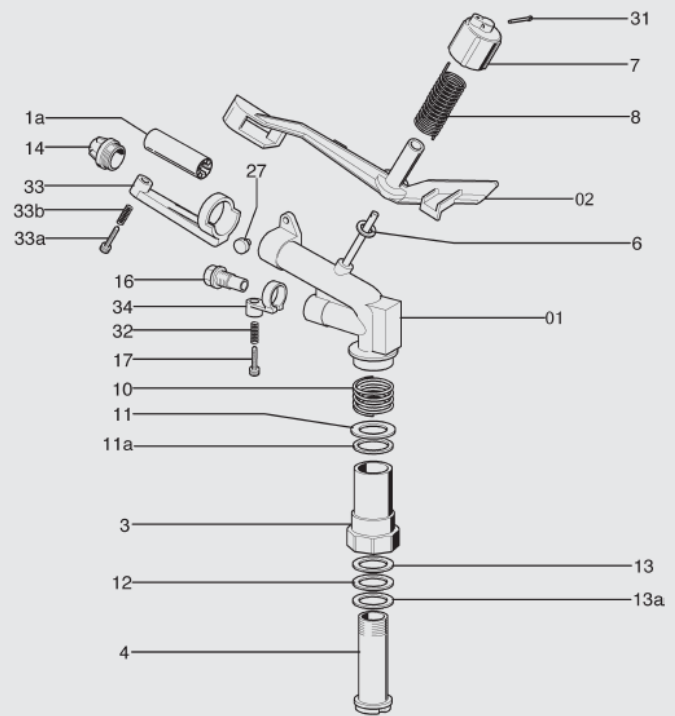


### Part Circle

### Full Circle

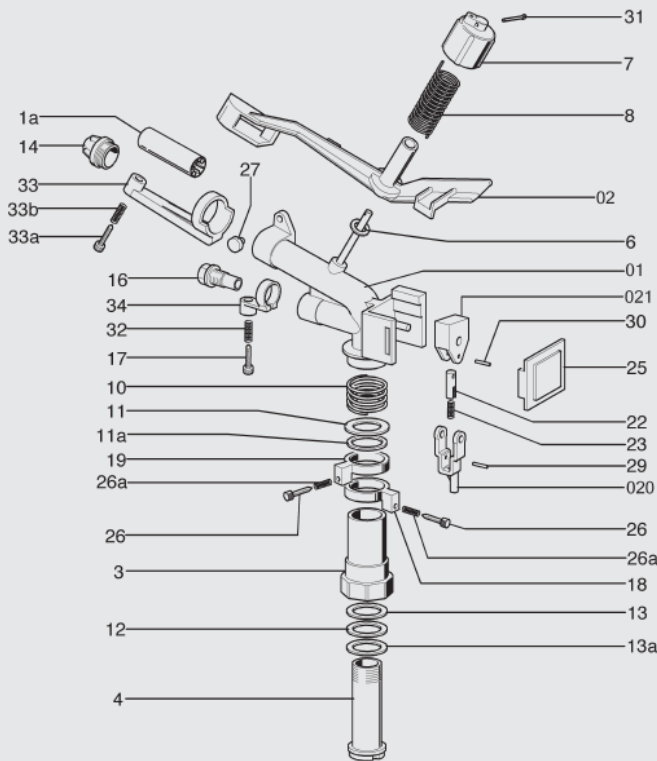

**Spare parts:** When ordering spare parts, please specify type of sprinkler and code number.

Data, weights and dimensions are not binding for the manufacturer, who reserves the right to bring changes as he sees fit.

Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description
			<b>PART CIRCLE</b>	142933kit	033	1	Complete Jet-Breaker	142934kit	034	1	Complete Secondary Jet-
143001	1	1	Sprinkler Body	142933	33	1	Jet-Breaker				
142901a	1a	1	Water Rectifier	142933a	33a	1	Jet Breaker Screw				
142902kit	02	1	Arm	141825a	33b	1	Spring				
142903	3	1	External Body	142934	34	1	Secondary Jet-Breaker				
142904	4	1	Internal Body	142934kit	034	1	Complete Secondary Jet-				
142906	6	1	Shaft Washer								
142907	7	1	Arm Spring Cap				<b>FULL CIRCLE</b>				
142908	8	1	Arm Spring	142901kit	01	1	Sprinkler Body				
142910	10	1	Friction Spring	142901a	1a	1	Water Rectifier				
142911	11	1	Friction Washer	142902kit	02	1	Arm				
142911a	11a	1	Teflon Washer	142903	3	1	External Body				
142512	12	1	Teflon Washer	142904	4	1	Internal Body				
142913	13	1	Rubber Washer	142906	6	1	Shaft Washer				
142913a	13a	1	Vulk Washer	142907	7	1	Arm Spring Cap				
142914	14	2	Main Nozzle	142908	8	1	Arm Spring				
142916	16	1	Secondary Nozzle	142910	10	1	Friction Spring				
142917	17	1	Jet Breaker Screw	142911	11	1	Friction Washer				
143018	18	1	Inversion Stopper	142911a	11a	1	Teflon Washer				
143019	19	1	Inversion Stopper	142512	12	1	Teflon Washer				
143019kit	019	1	Complete Inversion Ring	142513	13	1	Rubber Washer				
143020kit	020	1	Primary Lever	142913a	13a	1	Vulk Washer				
143021kit	021	1	Secondary Lever	142914	14	2	Main Nozzle				
143022	22	1	Spring House	142916	16	1	Secondary Nozzle				
143023	23	1	Inversion Spring	142917	17	1	Jet Breaker Screw				
143025	25	1	Inversion Lever Cover	142927	27	1	Knob				
143026	26	1	Inversion Screw	142931	31	1	Cap Split Pin				
141825a	26a	1	Spring	142932	32	1	Spring				
142927	27	1	Knob	142933kit	033	1	Complete Jet-Breaker				
143029	29	1	Pin For Lever	142933	33	1	Jet-Breaker				
143030	30	1	Pin For Lever	142933a	33a	1	Jet Breaker Screw				
142931	31	1	Cap Split Pin	141825a	33b	1	Spring				
142932	32	1	Spring	142934	34	1	Secondary Jet-Breaker				